



TIGER

Utility & Pole Pulling Equipment
Created by Linemen for Linemen

A SPARTACO COMPANY

AUGER-UP PORTABLE AUGER STAND



The safe and secure way to keep an auger positioned upright to ease the process of removal and reattachment.

Easy setup. The stand deploys in less than a minute, and quickly secures to the auger with ratchet straps and collar.

- Reduced worker related injury
- Prevents damage to customer property
- Prevents the possibility of drilling into unknown underground utilities
- Eliminates the potential of auger tipping over when partially screwed into the ground for removal
- Can be used to store all types of augers on any surface
- Stand is easily stored in a truck bin or on bed of truck
- No tools or ladder required
- Can be used by mechanics for maintenance or repair work on auger drive motors

SPECIFICATIONS

PART NUMBER

AS0050


Supports augers ranging from:
4.5" dia. x 4' tall up to 24" dia. x 12' tall

Center cup measures 4.5" inside dia. with adapter plate avail. for various pilot bits

Stowed dimensions: 15"W x 15" H x 19"D

Weight: 42 lbs.

Load capacity: 500 lbs.

Set up guide 

AUGER-UP SETUP GUIDE



Attach ring clip collar to auger (included with Auger-Up)



Position auger stand, remove locking pin and extend arms



Reinsert locking pin to insure arms remain properly positioned



Attach ratchet straps to each extended arm



Swing Auger into position and place the tip into the center-receiving cup



Attached ratchet straps to the ring clip collar on the auger



Tighten each ratchet strap to secure the auger



Fully secured auger



TiGER

A SPARTACO COMPANY

195 INTERNATIONALE BLVD. GLENDALE HEIGHTS IL 60139
PHONE: (800)-860-6170 FAX: (800)-345-3767 WWW.TIIGER.COM